


HOW TO ORDER 26R-2 THRU 26R-124

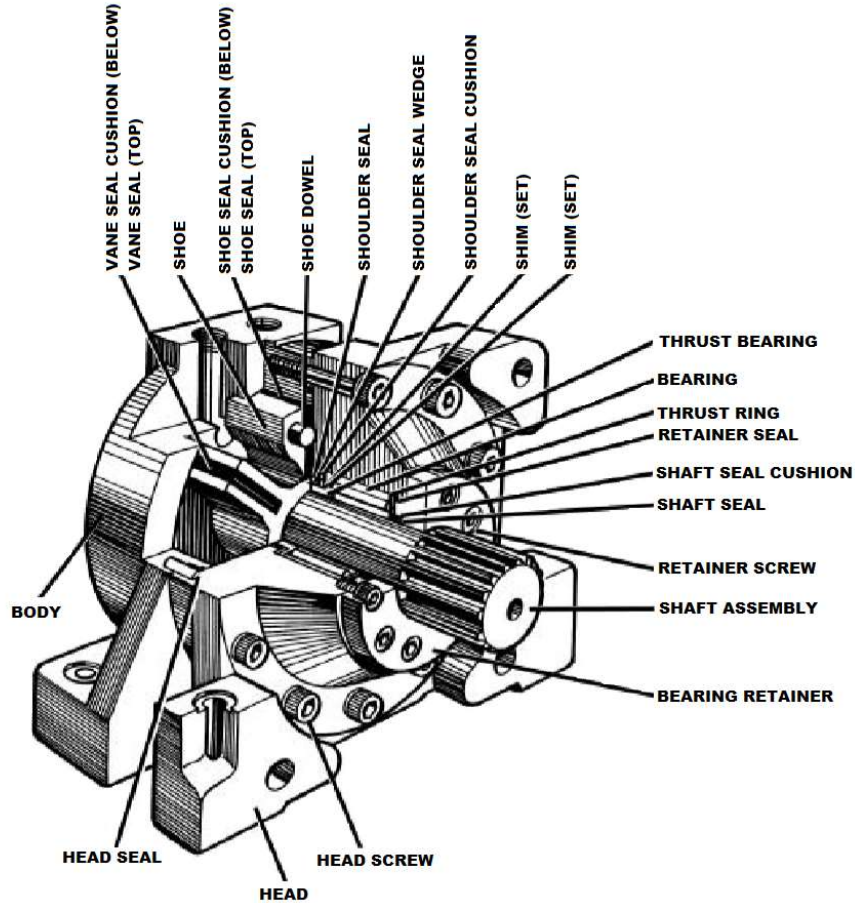

HOW TO ORDER

Please fill in ALL blocks in accordance with the KEY numbers and letters shown below.

EXAMPLE: 26R - 62 - 1V - SE - IS - FT/FLG - 2

- - - - - -

BLOCK # 1 2 3 4 6 7 8

Block 1 (MODEL)

26R

Block 2 (SIZE)

2
5
10
17
31
62
124

Block 3 (VANES)

1V Single Vane
2V Double Vane

Block 4 (SHAFT EXTENSION)

SE Single Extension
DE Double Extension

Block 6 (SHAFT TYPE)

IS 30° Involute Spline
PL Plain
Z Special

Block 7 (MOUNTING)

FT/FLG Foot/Flange
Z Special

Block 8 (PORTING)

1 NPT
2 SAE Straight Threads (Standard)
7 Manifold Ports (Consult factory for information)
0 BSPP Straight Threads
Z Special

NOTES: 1. Block "5" isn't used for 26R models

2. All "Z" (non-standard feature request) requires a "Request a Quote" to be filled out for Micromatic to review requirements